



SINGER® SEWING MACHINE

BOBBIN CASE THREADING INSTRUCTIONS


(Consult Instruction Book for bobbin winding instructions)

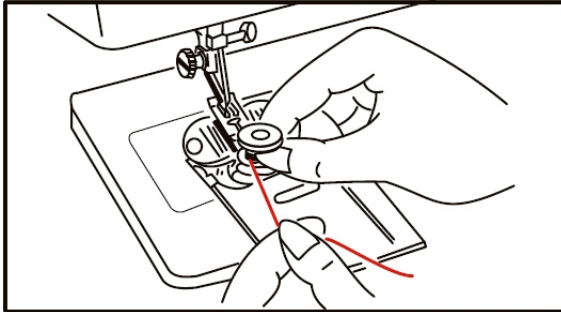


1. Slide bobbin cover plate toward you. Insert wound bobbin into bobbin case with thread spooling off to the left.

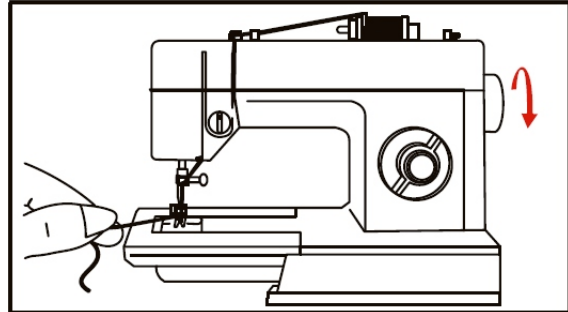


5. Hold top (needle) thread and turn handwheel toward you until needle goes to its lowest and then its highest point. Raise the presser foot using the presser bar lifter.

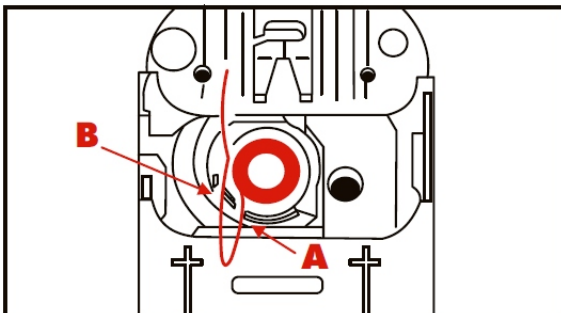


2. Guide thread to left through notch **A** and then pull straight back toward needle so that it passes through notch **B**.

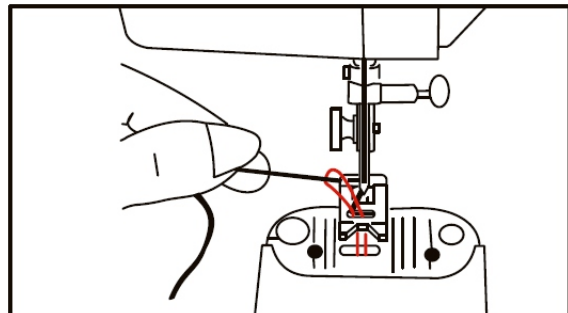


6. Gently pull top thread until lower (bobbin) thread comes up in the form of a loop.

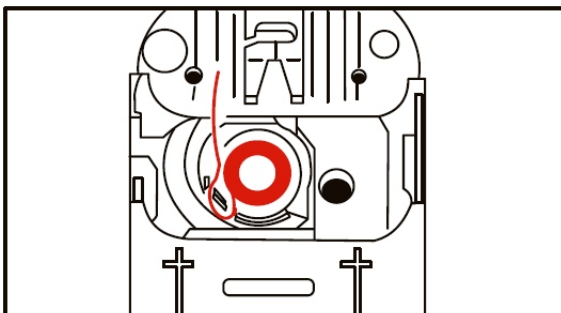


3. Leave several inches of thread laying across top of bobbin toward the back of the machine.

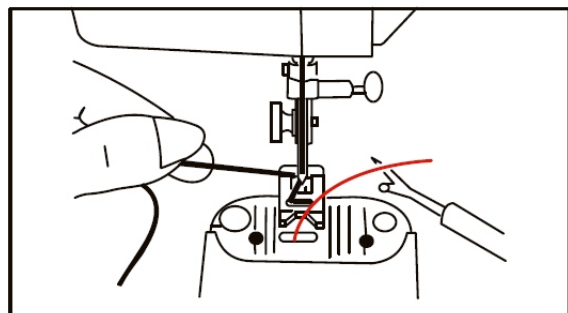

7. Use the flat side of a seam ripper or a pin to open up bobbin thread loop until end is visible.

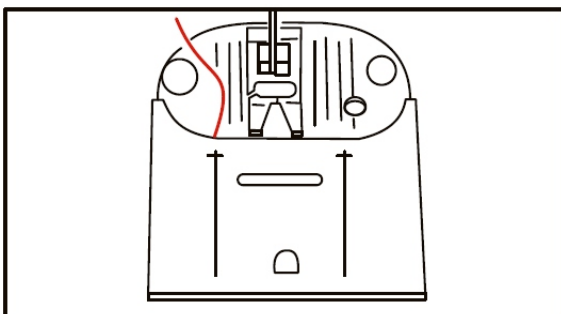

4. Slide bobbin cover plate back into position. thread tail should be visible, sticking out at top of cover.

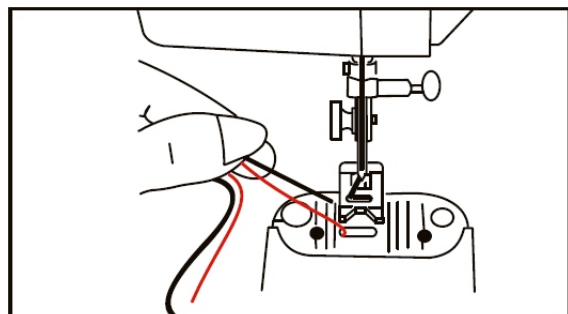

8. Pull both thread tails straight back under presser foot.

SINGER® SEWING MACHINE


IMPORTANT THREADING INSTRUCTIONS




This machine features a special Easy Threading System. Even if you have sewn before, take the time to learn how to properly thread the machine, and you will avoid serious sewing problems in the future.




1. Raise presser foot lever. This separates the tension discs in the machine that you will be feeding the thread through in step 5.

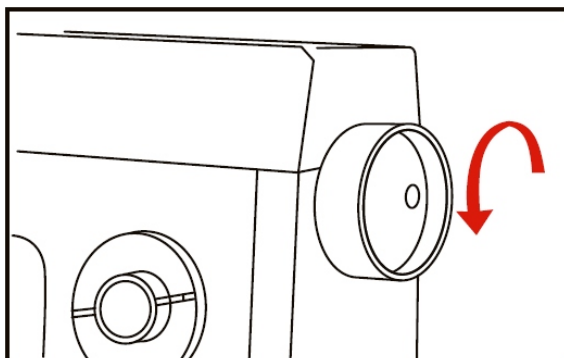


2. Turn handwheel toward you to raise needle to highest position.

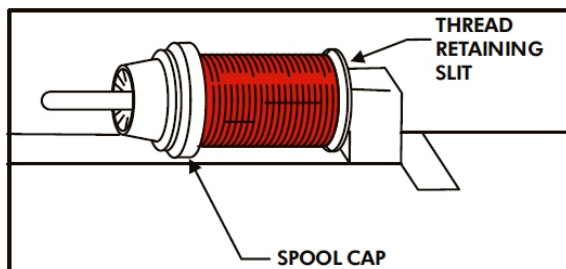


3. Remove spool cap. Place spool of thread on spool pin, with Thread Retaining Slit to right. Slide spool cap onto spool pin until it touches spool to prevent thread from tangling. For large spools of thread, larger end of spool cap should touch spool. For small spools, smaller end should touch spool.

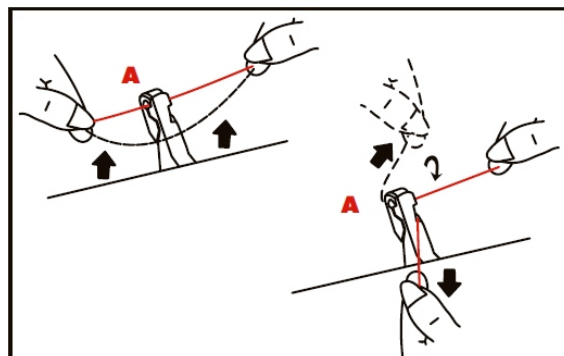

4. Using two hands, snap thread into thread guide post **A**, as illustrated.

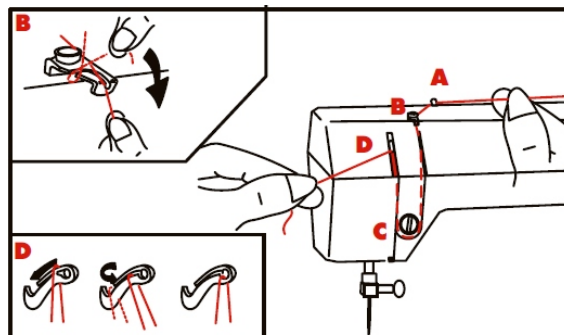

5. Holding thread secure at **A**, pass the thread under guide **B** and through the slot, guide thread down threading channel to tension system **C**. Pull thread firmly up to top of channel **D**, and then back down again.

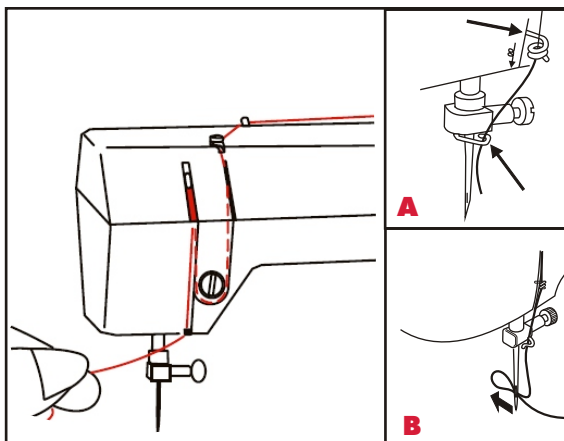

6. Before threading needle, test for proper threading as follows: Pull a few inches of thread through threading channel. Lower presser foot to engage tension discs, pull a few more inches through. There should be a noticeable difference between the thread tension when the presser foot is down and when it is up. If the thread pulls through easily when the presser foot is down, the machine is not properly threaded and sewing problems will result. Re-thread the machine and test again. To pass the thread through the spiral thread guide, start from the left, making a circular clockwise movement with your hand twice. The thread will slide inside the center of the spiral (illustration **A**). Pass the thread through the last thread guide from right to left and turn hand wheel toward you until needle is in its highest position. Lower presser foot. Thread eye of the needle. (illustration **B**).

IMPORTANT NOTE: If thread balls up in the bobbin case or knots up on the underside of the fabric, the machine may not be properly threaded. **DO NOT** adjust the thread tension until you have checked for proper threading using the test described in step 6.